



TECHNIWATCH

swiss precision tools

UNIVERSAL HANDLE FOR SCREW-DOWN CASE-BACKS

CASE-BACKS

OPENING AND CLOSING OF SCREW-DOWN CASE-BACKS


Ref.: E326000

THIS HANDLE HAS AN ADHESIVE SYNTHETIC CONTACT SURFACE, ENABLING YOU TO OPEN AND CLOSE ANY WATCH CASE-BACKS WITHOUT ANY OTHER TOOLS.

The main advantage of this handle lies in its adhesion. The sphere can fit any case-back geometry. Its deformation is limited by an adjustable stop, thereby providing a firm support and an optimal contact surface.

The handle's ergonomics and light weight were intended to minimise the physical force to be applied, and improve working comfort for the user. Hence it reduces strain associated with musculo-skeletal disorders (MSD).

Its good adhesion, excellent grip and the absence of metallic materials prevent mishandling, and therefore risks of scratching.

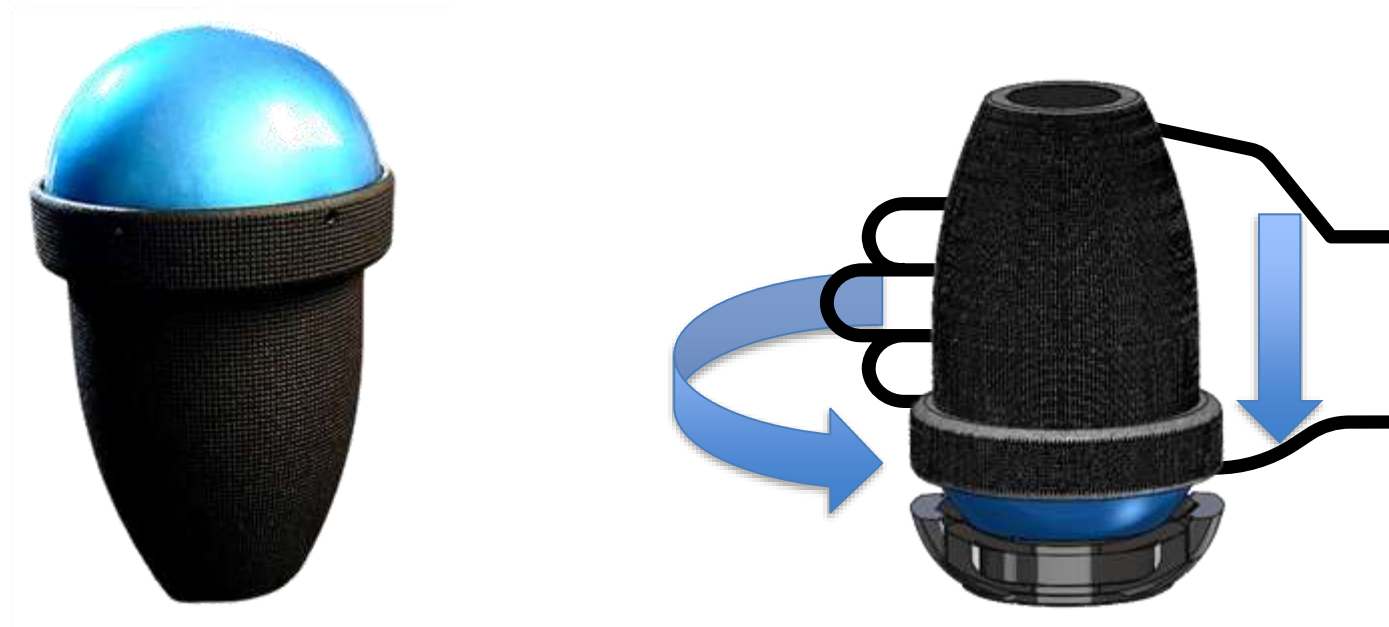

Technical specifications:

- Contact sphere:
 - Synthetic material
 - Adhesive
 - Non-scratching
- Contact area adjustable

Size:

Ø68 mm x 110 mm

Weight:

75 grams

References:

E326000

Techniwatch SA

Route de la Jaluse 5b,
2400 Le Locle
Tel : 032 926 19 46
www.techniwatch.ch


Discover our presentation videos on our YouTube channel « Techniwatch SA »
Also accessible by scanning the following QR code





PLAIN CASE-BACK OPENING HANDLE

Product details

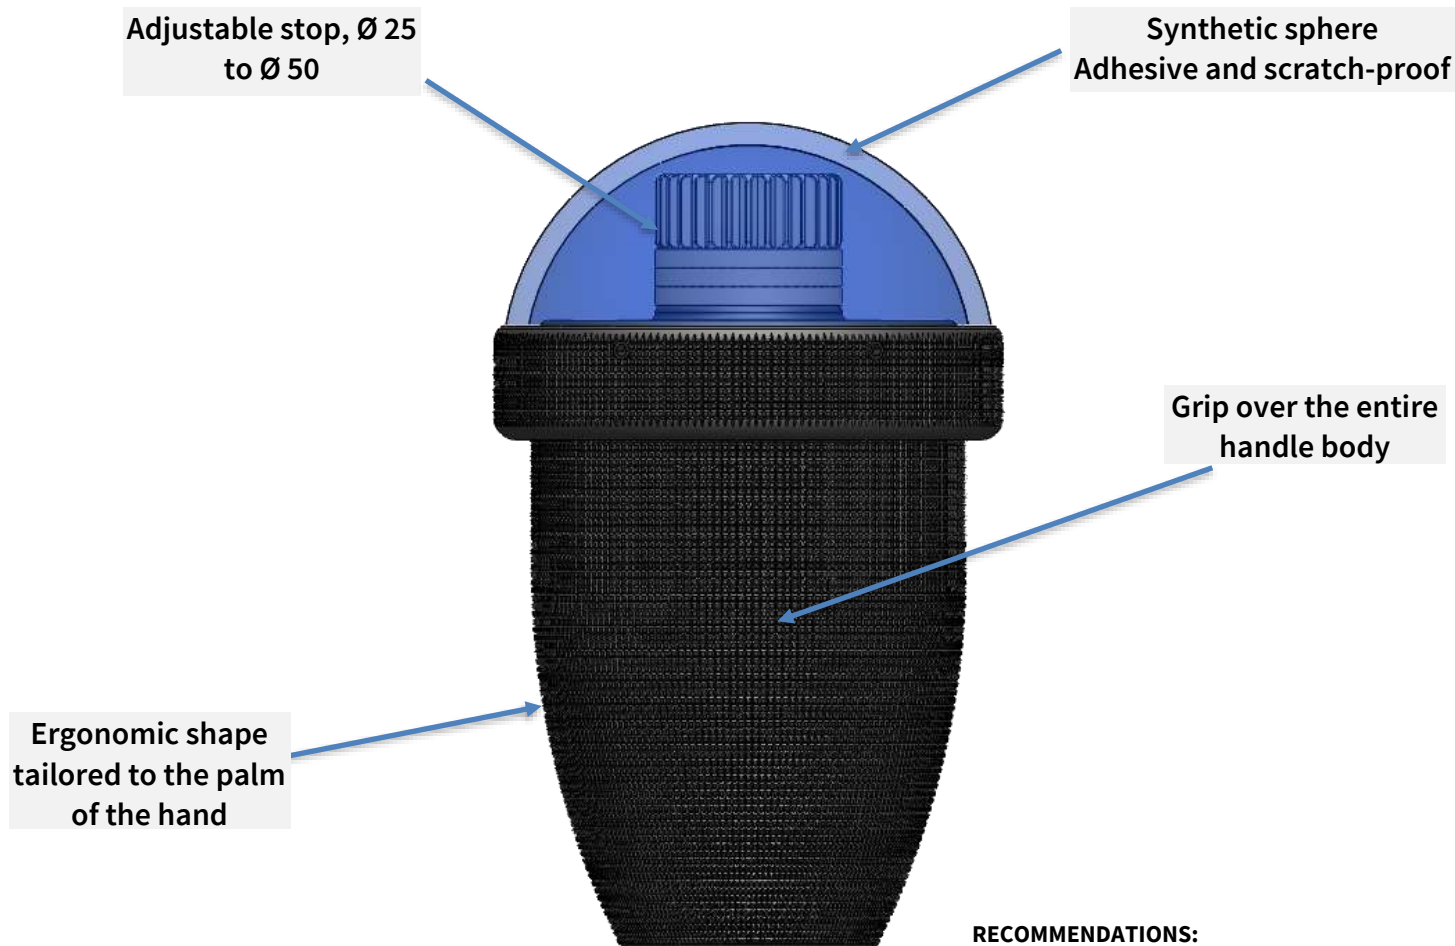

Number of washers	Ø of case-back
3	25 to 35
2	35 to 42
1	42 to 44
0	44 and +

RECOMMENDATIONS:

The sphere should be regularly cleaned using an alcohol-soaked cloth. This will increase its adhesion.

To adjust the contact area between the sphere and the case-back, you need only unscrew the 6 screws using a 1.5 mm Allen key, unscrew the textured screw and adjust the number of washers regarding the table on the left.

The membrane is interchangeable.






TECHNIWATCH

swiss precision tools

PLAIN CASE-BACK OPENING HANDLE

Accessories

	Products	Reference
	Spare sphere	E326000-S

Techniwatch SA

Route de la Jaluse 5b,
2400 Le Locle
Tel : 032 926 19 46
www.techniwatch.ch

Discover our presentation videos on our YouTube channel « Techniwatch SA »
Also accessible by scanning the following QR code

